



Unpacking

Please make sure the package contains the following items:

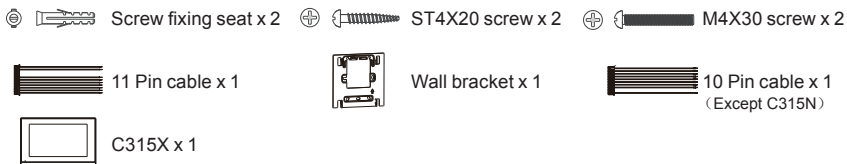


Product Overview

Front Panel

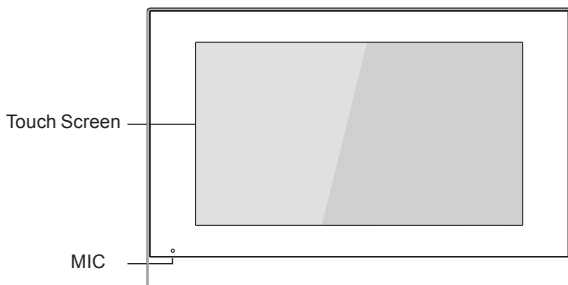


C315X

Rear Panel

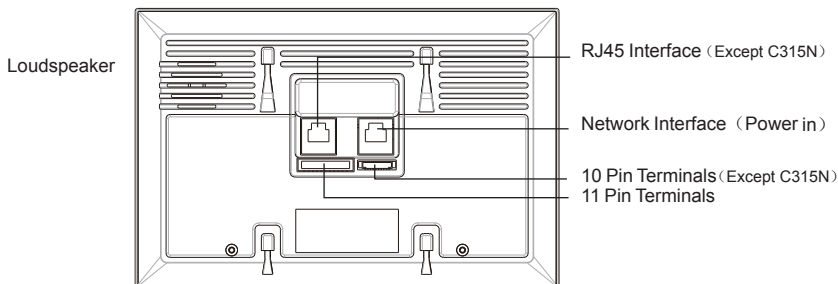


Installation


Without 86 embedded box in the wall

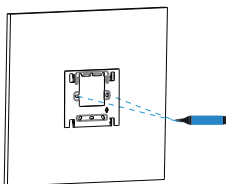


Mark two fixation holes through wall bracket on the wall, the distance between which is 60mm. Make sure the all cables can be passed from the middle of wall bracket.

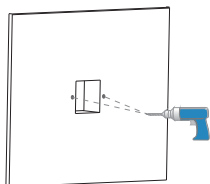

Take down the bracket, then using a 5mm hand drill to make the two fixation holes on the wall you marked before.

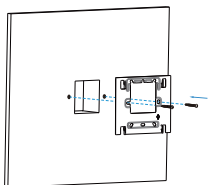


Use two ST4X20 screws to fix the wall bracket on the wall.

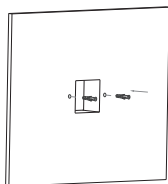


Once the fixation holes are made, insert the two screw fixing seats provided.

With 86 embedded box in the wall

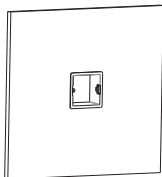


Make sure all cables in the 86 embedded box.

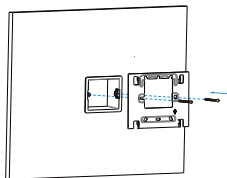

Fix the wall bracket on the 86 embedded box with two M4X30 screws.

C315X Quick Guide

Device Mounting

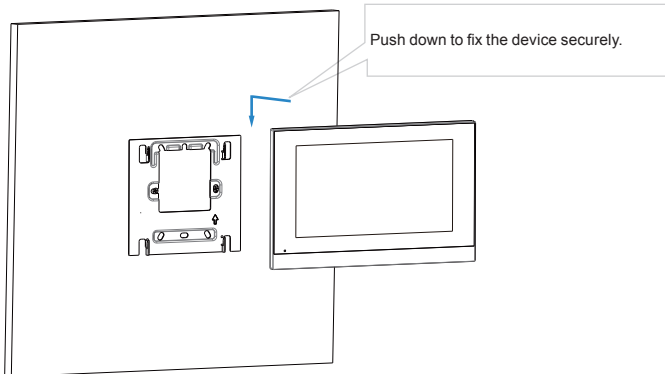




Configuration

1. After setting up network and power, press Settings icon , enter System Info , then choose Network to check IP address (DHCP by default).
2. Launch web browser and type in the IP address to access web interface, login with username and password. (admin by default)
3. Press Account to Register the device with your SIP account. (please refer to user manual for more information)

Operation

Make a call

Press Intercom icon  to enter the callee's number or room address , then choose Audio  or Video  mode to call out.

Receive a call

When receiving a video call, users can choose Audio or Video key to answer. However, if there is an audio call, users can only press Audio key to pick up.


Unlock

During the talk, press the unlock icon  in talking interface to unlock the door.

Monitor

Press Live View icon  to receive the video from indoor IPC or community IPC any time.

Device Wiring

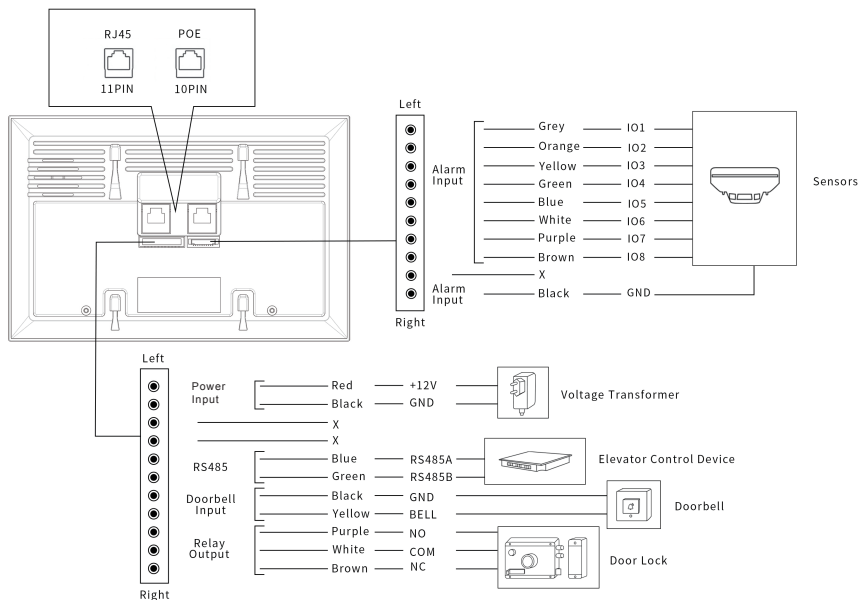

NOTICE:
Quick guide can be viewed on Global Visions website.

