

In the Akuvox Indoor station go to "Phone > Monitor".

**Number:** Number can be random or serialized. You can put the IP address/SIP number. It does not affect the RTSP streaming.

**Doorphone ID:** This is the name of the camera you want to see on the Monitor list.

**RTSP:** RTSP string of the corresponding camera.

**Username:** To enter the username if required.

**Password:** To enter the password if required.

Press add and submit the settings after putting the information.

The screenshot displays the 'Monitor' configuration page in the Akuvox system. The left sidebar contains navigation options: Status, Account, Network, Phone (selected), Time/Lang, Call Feature, Display Setting, Audio, Key/Display, Multicast, Logo, Monitor, Intercom, Relay, and App. The main area is titled 'Monitor' and includes sections for 'Monitor Setting', 'Door Phone', and 'Monitor Import/Export'. The 'Door Phone' section contains a table with columns for Index, Number, Doorphone ID, RTSP Address, User Name, and Display. Below the table, a form for adding a new doorphone is highlighted with a red box. The form fields are: Number (1), Doorphone ID (Provision Cam 1), RTSP Address (rtsp://192.168.3.35:354/ch1), User Name (admin), Password (masked), and Display in Call (Disabled). A red arrow points to the 'Submit' button on the right side of the form.

| Index                    | Number | Doorphone ID | RTSP Address                               | User Name | Display  |
|--------------------------|--------|--------------|--|-----------|----------|
| <input type="checkbox"/> | 1      | Camera 1     | rtsp://192.168.2.45/Streaming/Channels/102 | admin     | Disabled |
| <input type="checkbox"/> | 2      |              |  |           |          |
| <input type="checkbox"/> | 3      |              |  |           |          |
| <input type="checkbox"/> | 4      |              |  |           |          |
| <input type="checkbox"/> | 5      |              |  |           |          |
| <input type="checkbox"/> | 6      |              |  |           |          |
| <input type="checkbox"/> | 7      |              |  |           |          |
| <input type="checkbox"/> | 8      |              |  |           |          |
| <input type="checkbox"/> | 9      |              |  |           |          |
| <input type="checkbox"/> | 10     |              |  |           |          |

Form fields (highlighted in red):

- Number: 1
- Doorphone ID: Provision Cam 1
- RTSP Address: rtsp://192.168.3.35:354/ch1
- User Name: admin
- Password: \*\*\*\*\*
- Display in Call: Disabled

Buttons: Add, List, Cancel, Submit, Cancel

Below are some common RTSP strings-

### **Provision**

rtsp://<user name>:<password>@<IP Address>:<port number>/chID=<number of channel>&streamType=<sub/main>&linkType=<tcp/udp>

rtsp://192.168.5.55:554/chID=3&streamType=sub&linkType=tcp

*\*For Provision Please make sure that the API server is enabled (due to cybersecurity reasons, you can only enable it from the NVR/DVR local interface)*

### **Uniview**

rtsp://<ip>:<port>/unicast/c<channel number>/s<stream type>/live

rtsp://192.168.5.60:554/unicast/c9/s1/live

### **Hikvision/Brown Box**

rtsp://<address>:<port>/Streaming/Channels/<id>

rtsp:// 192.168.5.60:554/Streaming/Channels/101

Click this button for more resources



**Back to Global Visions  
Akuvox Knowledge Base**

