

## How to configure;

Device side: On the web portal, go to the path **Access Control>BLE** to enable it.

**BLE**

---


Enabled	<input type="checkbox"/>
Rssi Threshold	<input type="text" value="72"/> (-85~-50DB)
Open Door Interval	<input type="text" value="5"/> (Sec)

BLE enable: Enable or disable the Bluetooth feature.

Rssi Threshold: To configure the sensitivity of open the door via Bluetooth. The higher the value is, the more sensitive it is.

Open Door Interval: To open the door, every two Bluetooth opening intervals require at least that much time.

Phone side: Click the **ME** icon, go to **Authorization > BluetoothUnlock**, then enable the feature.

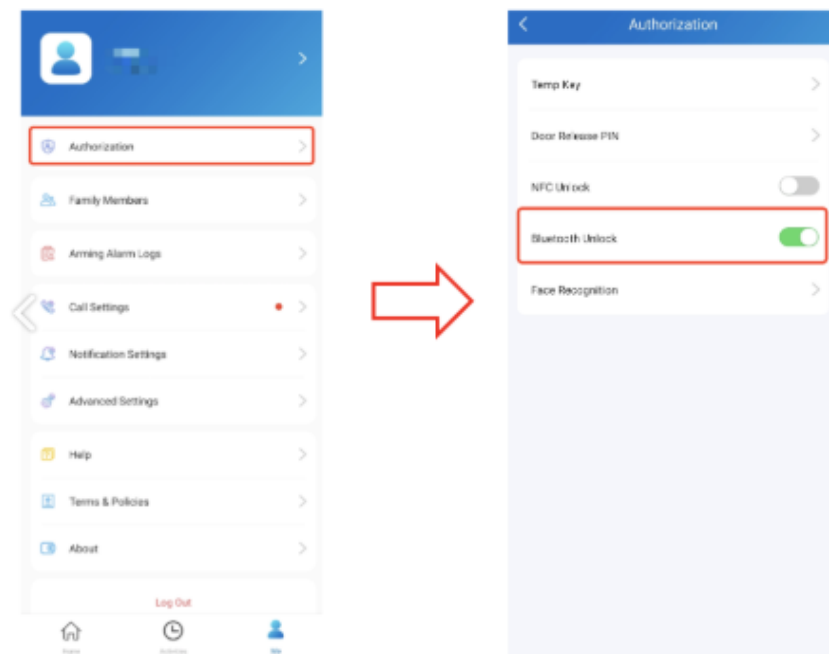

Click this button for more resources



[Back to Global Visions  
Akuvox Knowledge Base](#)

