

Akuvox Doorphones can read the encrypted Mifare card for greater security. To do so you can navigate to **Access Control > Card setting > Mifare Card Encryption**

[X916 so far is confirmed to not have this option yet]

New UI

Mifare Card Encryption

Enabled

Sector/Block /

Block Key

Old UI

Card Setting

Mifare Card Encryption

Enabled

Sector / Block /

Block Key

Parameter Set-up:

- **Enabled:** enable the Mifare/Defire Card Encryption.
- **Sector:** 3
- **Block:** 1
- **Block Key:** 613761376137

We also made a quick configuration file for easy local upload. Click [here](#) for download the .cfg file

How to upload .cfg file?

Navigate to **Upgrade > Advanced > Others**

Click "Choose File" and select the configuration file and click "Import".



Also you can activate this with an Autop Command on cloud:

Config.DoorSetting.SECURITY.ModeEnable = 1

Config.DoorSetting.SECURITY.RFSector = 3

Config.DoorSetting.SECURITY.RFBlock = 1

Config.DoorSetting.SECURITY.RFBlockKey = 613761376137

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

